

Instructions for use (locker)

LOCKING

- To lock, present your Uni-card to reader (door knob) of any open locker.
- Locking triggers an acoustic signal, LED flashes green.
- Bolt engages audibly.
- Locker is locked; signalled by flashing red LED (one flash every 4 seconds).
- Bolt remains engaged until presentation of UNI-card that triggered locking mechanism at reader (door knob).
- Locker number is stored on UNI-card (one locker per card).

UNLOCKING

- Presenting UNI-card at reader (door knob) triggers an acoustic signal, LED flashes green.
- Bolt disengages audibly.
- Locker is open (LED remain dark).
- Digital information on UNI-card is deleted.
- Locker is free for further use.

LED Signale:

RED	=	wrong transponder
BLUE	=	bolt in final position
GREEN	=	correct transponder
RED flashing	=	locked (in use)